

DK-01

Drop Kit for Deere and Kinze

Installation Instructions



Martin Planter Attachments

Martin Industries LLC

206 Elk Fork Road

Elkton, KY 42220

Telephone: 270-265-5817

E-Mail: martin@martintill.com

www.martintill.com



Installation Instructions for DK-01

STEPS

- 1) Attach drop bracket to tail wheel using the 5/8" X 1 3/4" bolt and nut.
- 2) Thread the 3/8" X 1/2" bolt in to one of the threaded holes in the drop bracket. These 2 threaded holes are for angle adjustment of the closing wheels.


5/8" X 1 3/4" Bolt
(B5M58NC134)
&
5/8" Nut
(N58CNL)

The head of 3/8" X 1/2" bolt
(B5M38NC12) fits in the hole of
the tail wheel housing.



Two threaded holes are provided so that the amount of tail wheel lift can be varied to increase or decrease the aggressiveness of the spading closing wheels.

More tail wheel lift equals more aggressive closing.

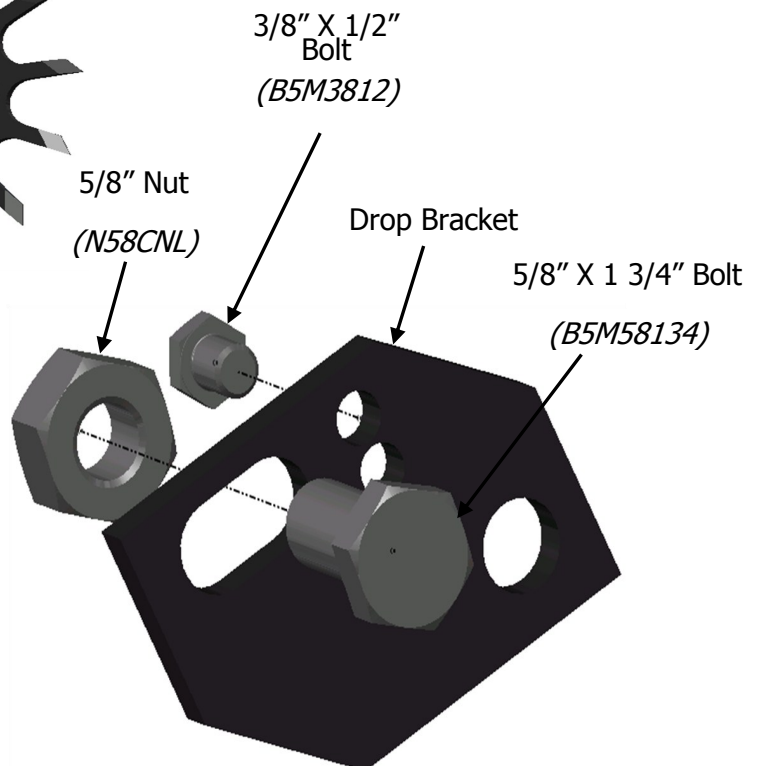

Hardware Required Per Wheel

1) Drop Bracket	QTY 1
2) 5/8" X 1 3/4" Bolt	QTY1
3) 5/8" Nut	QTY 1
4) 3/8" X 1/2" Bolt	QTY 1