

SmartClean Recall – Oriole and Converter Replacement

1 Removal for Recall


The Oriole Controller and Converter Box must be replaced with new boxes. Follow the below steps to remove the current boxes for replacement.

1. Unplug the cables labelled *ORL-A* and *ORL-B* from the Oriole Controller.
2. This step will vary slightly depending on the mounting location of the Oriole Controller. Remove the two screws mounting the Oriole Controller to the main SmartClean box. Alternatively, if the Oriole Controller is screwed or tie wrapped directly to the implement, remove the two mounting screws or tie wraps.
 - a. If the controller was screw mounted, put the screws and washers back into the mounting holes so they are not misplaced.
 - b. Make a note of how the Oriole Controller is installed so that the replacement can be installed in the same manner.
3. Place the Oriole Controller in the provided shipping box.



4. Unplug the cable labelled *CONVERTER BOX* from the converter box.
5. This step will vary slightly depending on the mounting location of the Converter Box. Remove the two screws mounting the Converter Box to the main SmartClean box. Alternatively, if the Converter Box is screwed or tie wrapped directly to the implement, remove the two mounting screws or tie wraps.
 - a. If the controller was screw mounted, put the screws and washers back into the mounting holes so they are not misplaced.
 - b. Make a note of how the Converter Box is installed so that the replacement can be installed in the same manner.

6. Place the Converter Box in the provided shipping box.

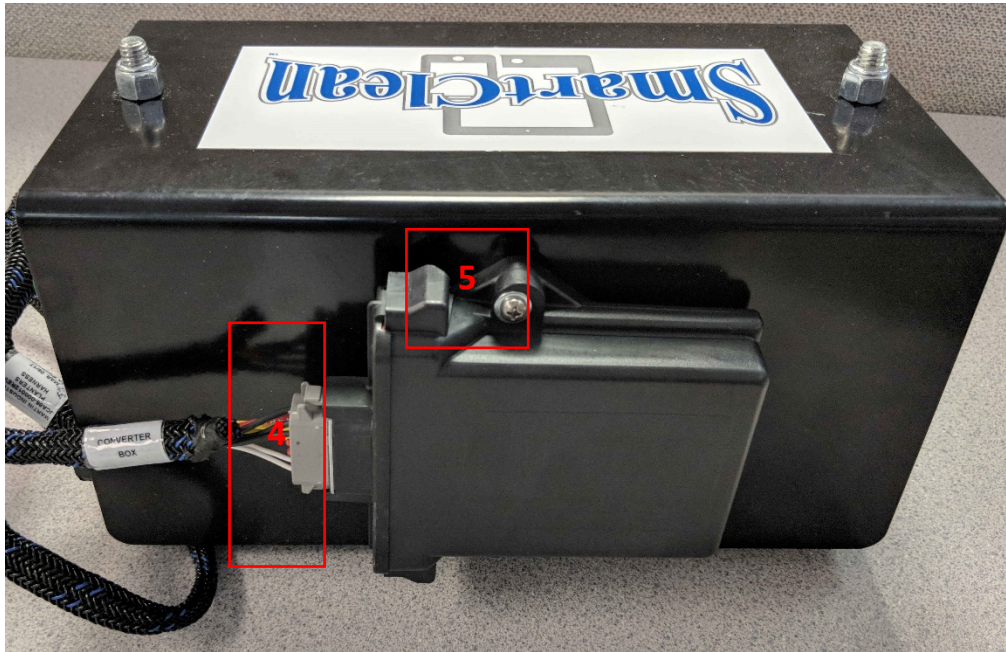

7. Ship the box containing the Oriole Controller and Converter Box to Martin-Till.

2 Reinstallation

You have received a new Oriole Controller and Converter Box from Martin-Till. Follow the below steps to install the replacements.

1. This step will vary slightly depending on the original mounting location of the Oriole Controller. Remount the Oriole Controller by screwing it into the main SmartClean box. Alternatively, if the Oriole Controller was screwed or tie wrapped directly to the implement, remount it as it was previously installed.
2. Plug in the cables labelled *ORL-A* and *ORL-B* from the Oriole Controller.



3. This step will vary slightly depending on the original mounting location of the Converter Box. Remount the Converter Box by screwing it into the main SmartClean box. Alternatively, if the Converter Box was screwed or tie wrapped directly to the implement, remount it as it was previously installed.
4. Plug in the cable labelled *CONVERTER BOX* from the converter box.

